


BUDGET HEIGHT ADJUSTABLE ASSEMBLY INSTRUCTIONS RECTANGULAR DESKS

Rack Systems (Engineering) Ltd
19-25 Dove way,
Kirkby Mills Industrial Estate,
Kirkbymoorside,
York
YO62 6QR

Tel; 01751 432647 Fax; 01751 433375

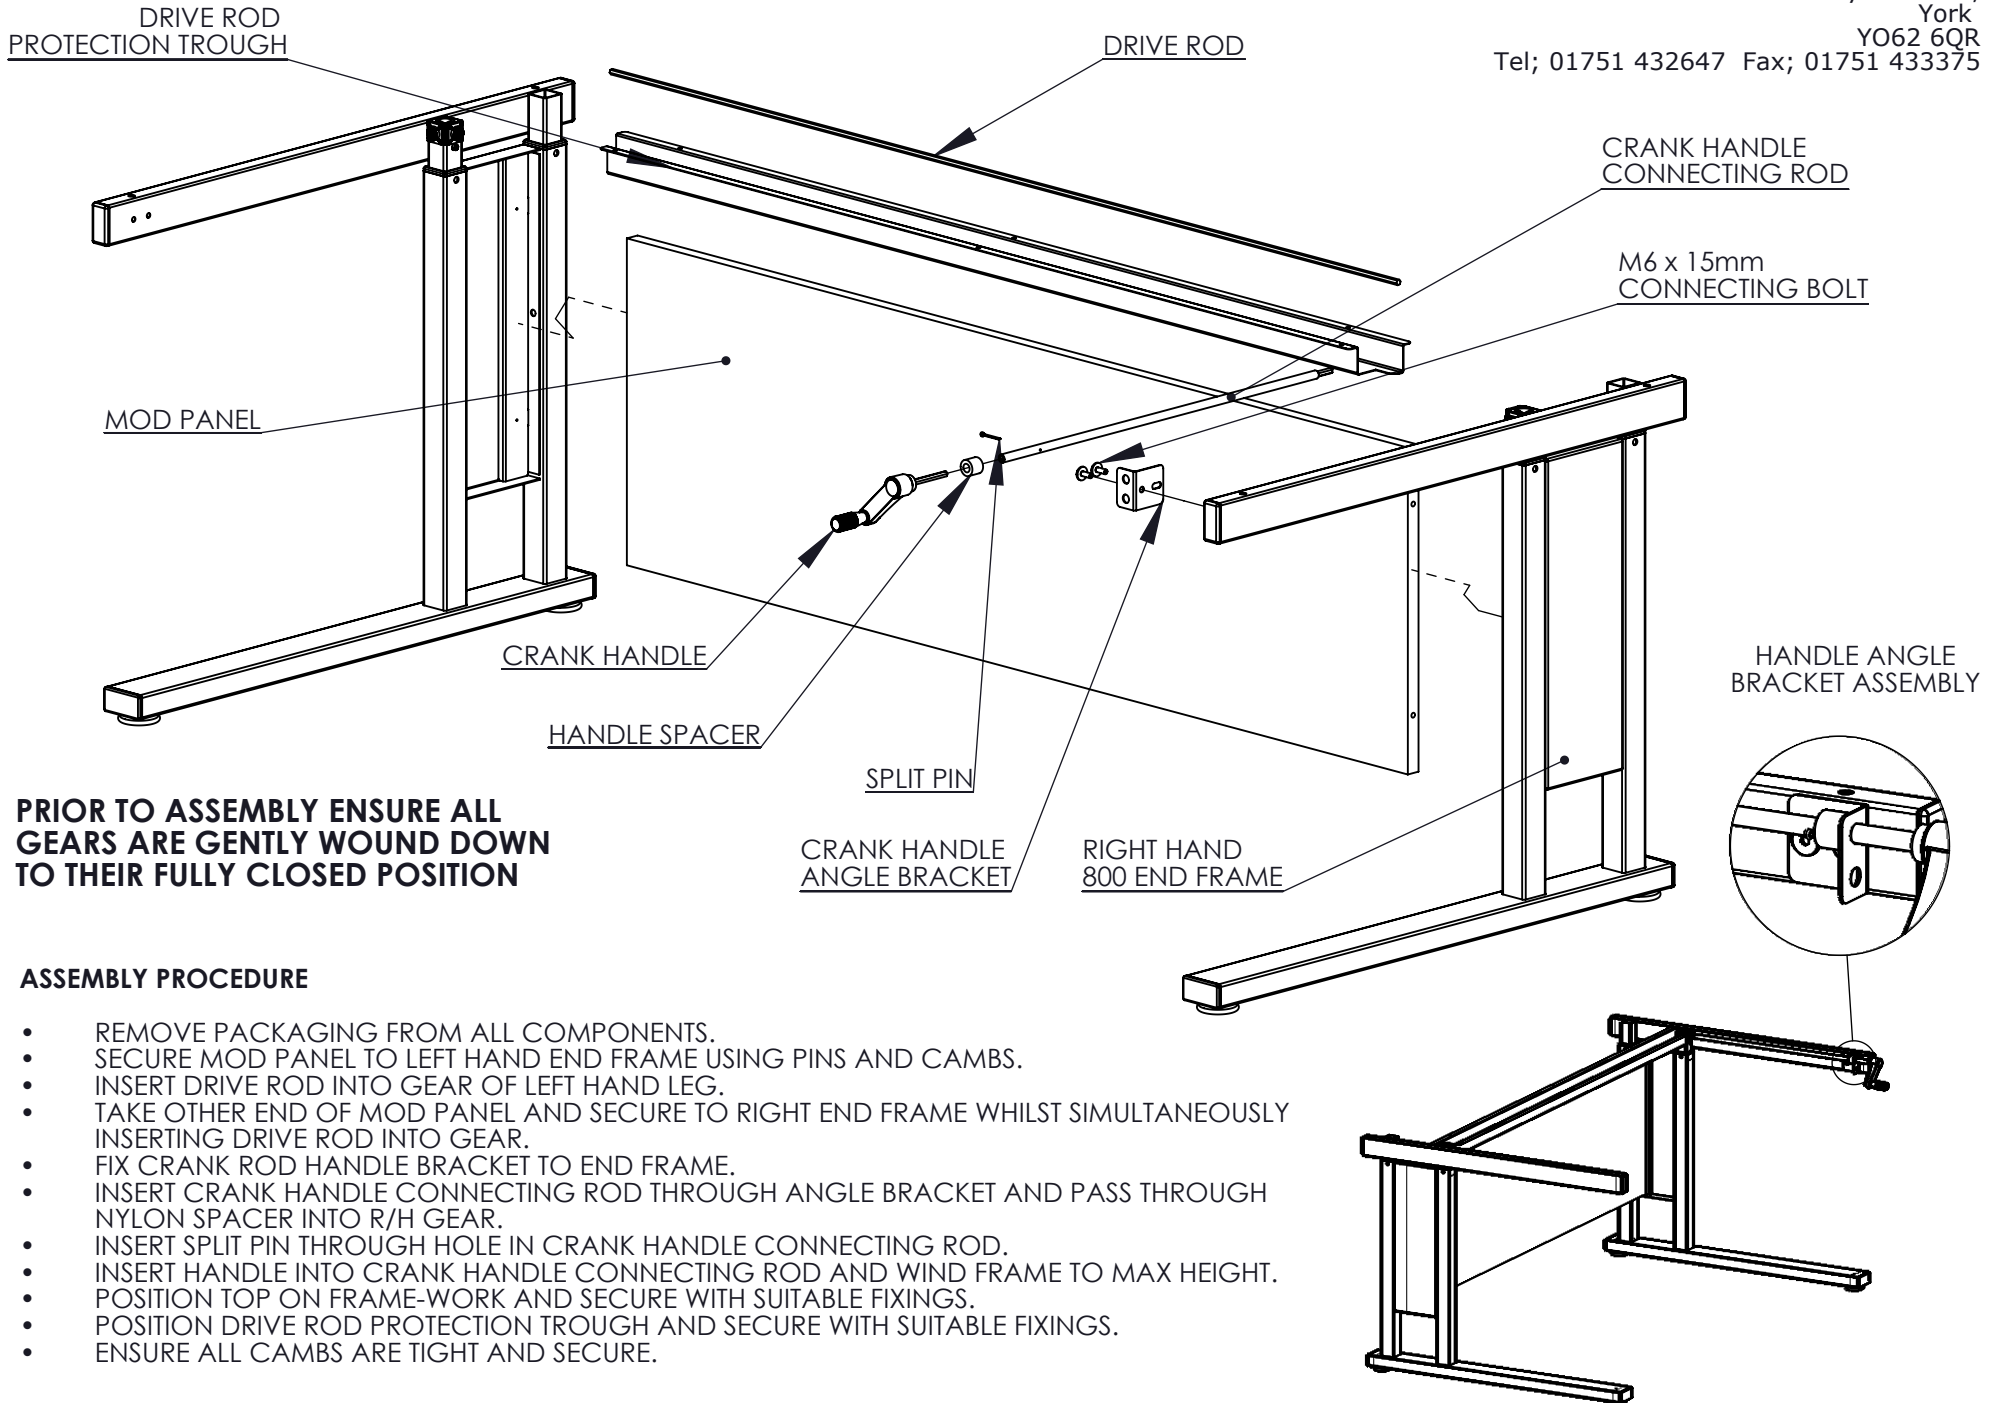

PRIOR TO ASSEMBLY ENSURE ALL GEARS ARE GENTLY WOUND DOWN TO THEIR FULLY CLOSED POSITION

ASSEMBLY PROCEDURE

- REMOVE PACKAGING FROM ALL COMPONENTS.
- SECURE MOD PANEL TO LEFT HAND END FRAME USING PINS AND CAMBS.
- INSERT DRIVE ROD INTO GEAR OF LEFT HAND LEG.
- TAKE OTHER END OF MOD PANEL AND SECURE TO RIGHT END FRAME WHILST SIMULTANEOUSLY INSERTING DRIVE ROD INTO GEAR.
- FIX CRANK ROD HANDLE BRACKET TO END FRAME.
- INSERT CRANK HANDLE CONNECTING ROD THROUGH ANGLE BRACKET AND PASS THROUGH NYLON SPACER INTO R/H GEAR.
- INSERT SPLIT PIN THROUGH HOLE IN CRANK HANDLE CONNECTING ROD.
- INSERT HANDLE INTO CRANK HANDLE CONNECTING ROD AND WIND FRAME TO MAX HEIGHT.
- POSITION TOP ON FRAME-WORK AND SECURE WITH SUITABLE FIXINGS.
- POSITION DRIVE ROD PROTECTION TROUGH AND SECURE WITH SUITABLE FIXINGS.
- ENSURE ALL CAMBS ARE TIGHT AND SECURE.