


## R8 BEAM SYSTEM ASSEMBLY INSTRUCTIONS RECTANGULAR DESKS

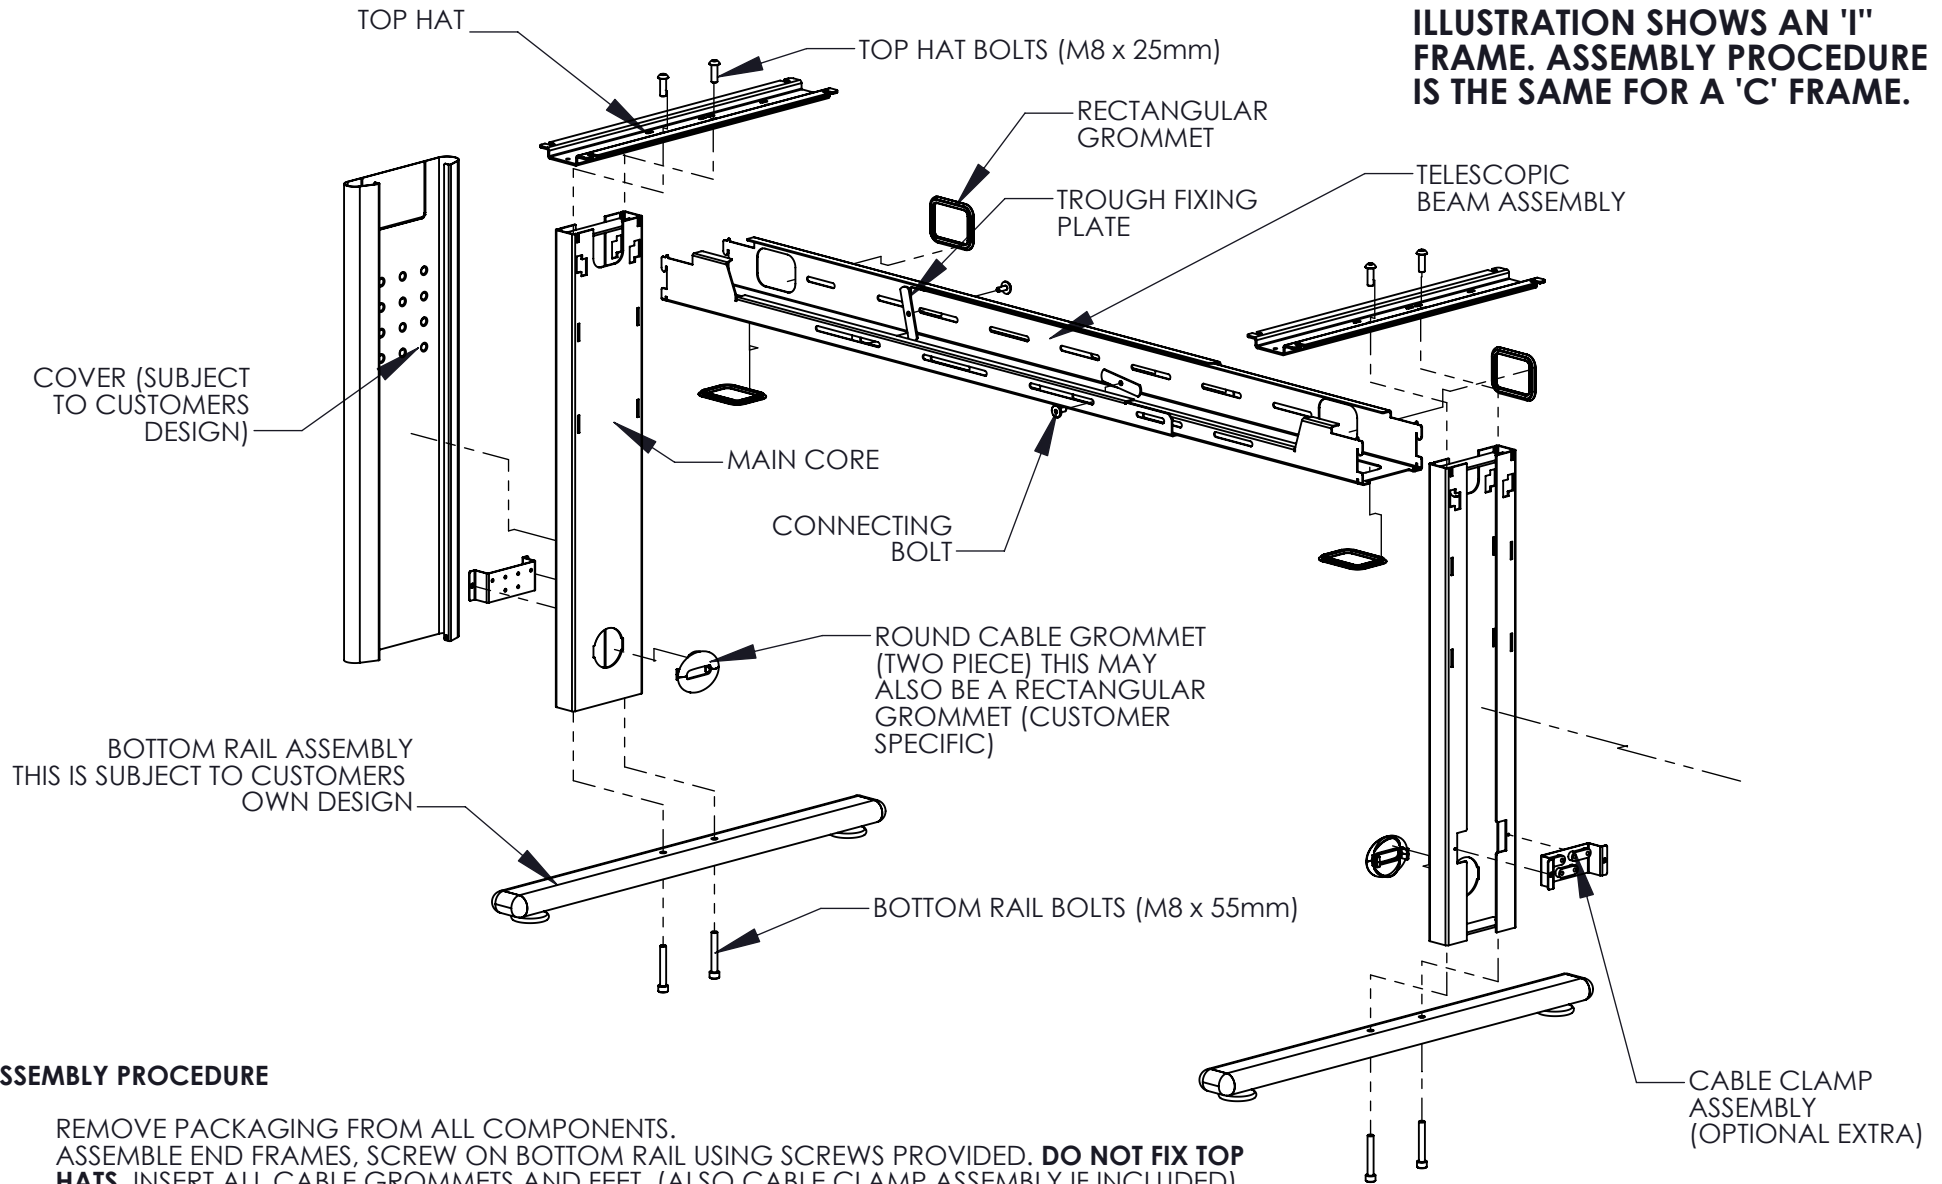

### ASSEMBLY PROCEDURE

- REMOVE PACKAGING FROM ALL COMPONENTS.
- ASSEMBLE END FRAMES, SCREW ON BOTTOM RAIL USING SCREWS PROVIDED. **DO NOT FIX TOP HATS.** INSERT ALL CABLE GROMMETS AND FEET. (ALSO CABLE CLAMP ASSEMBLY IF INCLUDED)
- INSERT ONE END OF TELESCOPIC BEAM INTO LEG. AT THIS POINT A RUBBER Mallet MAY BE REQUIRED TO KNOCK THE BEAM INTO POSITION, TAKE CARE NOT TO DAMAGE THE BEAM. REPEAT WITH OTHER END FRAME.
- SECURE TOP HATS WITH BOLTS PROVIDED.
- OPEN LEGS APART TO APPROXIMATE DISTANCE TO SUIT TOP LENGTH.
- HOLD TROUGH FIXING PLATES ON INSIDE OF TROUGH AND INSERT CONNECTING BOLTS AS SHOWN. DO NOT TIGHTEN.
- <PARA >TIGHTEN CONNECTING BOLTS ONTO TOP HATS.
- TIGHTEN CONNECTING BOLTS IN TELESCOPIC BEAM.

Rack Systems (Engineering) Ltd  
19-25 Dove way,  
Kirkby Mills Industrial Estate,  
Kirkbymoorside,  
York  
YO62 6QR

Tel; 01751 432647 Fax; 01751 433375